
JA-110I Bus partition/output activation indicator

The JA-110I is a component of the **JABLOTRON JA-100** system. It is used for the optical indication of the status of individual system sections (set / unset) or the status of programmable outputs. The indicator should be installed by a trained technician with a valid certificate issued by an authorized distributor.

Installation

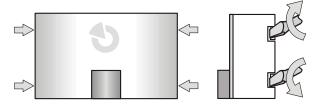

- Open the indicator cover by loosening the four tabs by twisting them in the direction indicated by the arrows using a suitable screwdriver.
- 2. Remove the board from the base by pressing the tab (1).

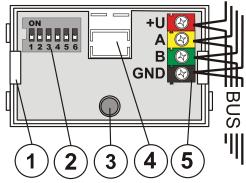


Figure: 1 – board tab; 2 – configuration switches; 3 – red indicator LED; 4 – punchable opening; 5 – bus terminals

- Use the switches (2) to set the section number (see Tab. 1) or PG output (see Tab.2) which should be indicated.
- 4. Push the cable through the hole (4) punched in the base and attach the base to the selected place.
- 5. **Push the indicator board back in place and** connect the bus cable to the terminals (5).




When connecting the module to the system bus, always switch the power off.

If the indicator is installed outside the protected area, a JA-110T bus insulator should be used.

- When you have switched the system on, test the functioning of the indicator.
- 7. Reinsert the indicator cover.

| ON 1 2 3 4 5 6 | SC | ON | SC |
|-------------------|----------------|----------------|-----------------|
| | 1 | 1 2 3 4 5 6 | 9 |
| ON | SC | ON | SC |
| 1 2 3 4 5 6 | 2 | 1 2 3 4 5 6 | 10 |
| ON 1 2 3 4 5 6 | SC | ON | SC |
| | 3 | 1 2 3 4 5 6 | 11 |
| ON 1 2 3 4 5 6 | SC | ON | SC |
| | 4 | 1 2 3 4 5 6 | 12 |
| ON | SC | ON | SC |
| 1 2 3 4 5 6 | 5 | 1 2 3 4 5 6 | 13 |
| ON 1 2 3 4 5 6 | SC | ON | SC |
| | 6 | 1 2 3 4 5 6 | 14 |
| ON 1 2 3 4 5 6 | SC 7 | ON 1 2 3 4 5 6 | SC 15 |
| ON 1 2 3 4 5 6 | SC 8 | | |

Tab. 1 Section indication setting

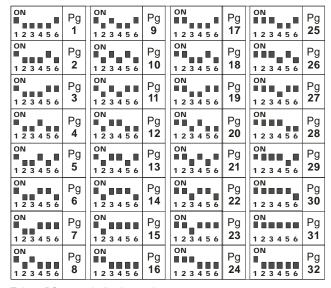

Tab. 2 PG output indication setting

Notes:

- The indicator does not occupy any position / address in the control panel (it is not enrolled to the system).
- If you connect multiple modules with the same settings, they will indicate identically.
- The number of indicators is only limited by the power consumption from the digital bus.

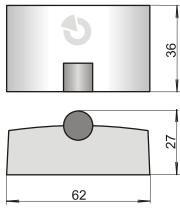


Figure: The JA-110I indicator dimensions.

Technical specifications

| Power | from control pane | I digital bus 12 V (915 V) |
|-------------------------|---------------------|----------------------------|
| Standby power consum | ption (LED on / off | 6 mA / 3 mA |
| Current consumption for | or cable selection | 6 mA |
| Dimensions | | 62 x 36 x 27 mm, |
| Classification | | Grade II |
| according to | | EN 50131-1, EN 50131-3 |
| Operational environment | nt according to EN | 50131-1 II. Indoor general |
| Operating temperature | range | -10°C to 40°C |
| Also complies with | | EN 50130-4, EN 55022 |



JABLOTRON ALARMS a.s. hereby declares that the JA-110l indicator is in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC. The original of the conformity assessment can be found at www.jablotron.com - Technical Support section



Note: Although this product does not contain any harmful materials we suggest you return the product to the dealer or directly to the producer after use. For more detailed information visit www.jablotron.com.

