

Fire Control Panel FS4000



INSTRUCTION MANUAL

Contents

1. Introduction	4
2. Terminology	4
3. Function	5
4. Technical features	5
4.1 Fire alarm lines	5
4.2. Current thresholds for	5
4.3. Controllable output for fire condition	5
4.4. Relay output for fault condition	6
4.5. Performance	6
4.6. Indications of registered events	6
4.7. Power supply	6
4.7.1. Mains	6
4.7.2. Backup batteries	6
4.7.3. Consumption on backup batteries supply	6
4.8. Power supply to external devices	7
4.9. Fuses	7
4.10. Dimensions	7
4.11. Weight, backup batteries not included	7
5. Contents of delivery	7
6. General information	7
6.1 Access levels	7
6.1.1. Access level 1	7
6.1.2. Access level 2	7
6.1.3. Access level 3	7
6.1.4. Access level 4	7
6.2. Indications and buttons for control	8
6.3. Duty mode configurations - General information	10
6.4. Conditions of the fire control panel	11
7. Duty mode	11
7.1. Description	11
7.2. LED and sound indication	11
7.3. Using the buttons	11
7.4. Additional options	11
8. Fire condition	12
8.1. Description	12
8.2. Led and sound indication	12
8.3. Using the buttons	12
8.3.1. Button (Alarm)	12
8.3.2. Button (Outputs)	12
8.3.3. Button (Reset of lines)	12
9. Fault condition	13
9.1. Description	13
9.2. Led and sound indication	13
9.3. Using the buttons	14
10. Disabled component mode	14
10.1. Description	14
10.2. Disable/Enable a line	15
10.3. Disable/Enable outputs in Fire condition	15
10.4. Switching ON/OFF Communicaton interface RS485	16
10.5. Disable/Enable of „ground-check“	16
11. Test condition	17
11.1. Description	17
11.2. Setting/Removing a line in Test condition	17

12. Delay of outputs	18
13. User configuration of outputs	18
14. Installation and initial start of the fire control panel	19
14.1. To mount the fire control panel	19
14.2. Periphery devices assembly	19
14.2.1. Mounting periphery devices to controllable outputs	19
14.2.2. Mounting periphery devices to relay outputs	19
14.3. Connecting fire detectors	20
14.4. Connection to power supply	21
15. Fire control panel start up	21
16. Conditions of operation, storage and transportation	22
17. Warranty	22
18. Appendixes	23

1. Introduction

Fire control panel FS4000 is an up-to-date, highly reliable, multifunctional and versatile unit. It is designed to receive signals from manual call points and automatic fire detectors, releasing sound and light indication. The fire control panel provides options for connection of external signal and executive units.

2. Terminology

DELAY OF OUTPUTS – delay of activation of controllable and relay outputs with a certain period of time from the moment a fire condition is registered. Typically, the delay period is sufficient for the staff to inspect the premises indicated by the fire control panel. The delay is eliminated through activation of a manual call point (response current $\geq 40\text{mA}$ at 24V) or by a fire condition in another line. The delay time is user programmable and is equal for all fire alarm lines.

DISABLED LINE – a switched off *line*, without power supply, not controlled for activated fire detectors and fault condition. This condition is user defined. The indication for a disabled line includes common light indication and separate light indication for each line.

DISABLED OUTPUTS – *the controllable output* and *the relay output* are switched off (executing devices can not be activated) and are not monitored for a fault condition. This feature is user defined. The indication for a disabled controllable output includes common light indication and separate light indication for the controllable output.

GROUNDS – non-system *non-fatal fault condition*, due to leakage to a grounded wire.

CONTROLLABLE OUTPUT – potential output that monitors the serviceability of the connection wires between the fire control panel and the executing device.

SHORT CIRCUIT IN A LINE OR IN A CONTROLLABLE OUTPUT – non-system *non-fatal fault condition* due to registered current value in a *line* or in a *controllable output* that exceeds a specified threshold value.

LINE IN TEST – a *line* set by the user to Test condition. The line is powered and reset (the power is cut off for 3 s) periodically every 64 s. The events registered in a line in Test condition are not saved in the archive and do not trigger associated outputs nor light and sound signalling. The indication for a line in Test condition is common light indication and separate light indication for each line.

LOCAL SOUNDER - sounder built-in the fire control panel

NON-FATAL FAULT CONDITION – fault condition that allows the fire control panel to continue operation. A non-fatal fault condition is usually a *non-system* fault condition. The indication is common light indication, local sound indication and text messages on the LCD display.

ACCESS LEVEL – access level to various indications and control functions.

LOW BATTERY – non-system *fatal fault condition* due to full discharge of the backup batteries upon interrupted power supply.

SUPRESSED OUTPUT – *controllable* or *relay* output which should normally be activated upon Fire condition, but is manually switched off by the user.

FIRE ALARM LINE (further on it will be referred as LINE) – a combination of automatic fire detectors and manual call points, physically connected by the means of two-wire connection. The basic configuration of FS 4000 includes 2 lines; the maximum configuration includes 8 lines. Up to 32 fire detectors can be integrated into one line.

FIRE CONDITION – Fire condition phase entered by the control panel upon activation of automatic fire detector or manual call point. Common light indication and separate light indication for each line, local light indicators and local sound signaling indicate the phase.

FIRE CONDITION 1st STAGE – Fire condition phase, is when the Control Panel indicates activation of automatic fire detector or manual call point. This phase continues until estimated time. Indication includes light indication and local sound signaling.

FIRE CONDITION 2nd STAGE – Fire condition phase, entered by the Control Panel indicates that the estimated time of fire condition phase first stage has expired or upon manual call point activation. Indication includes light indication and local sound signaling.

INTERRUPTED LINE OR CONTROLLABLE OUTPUT – non-system *non-fatal fault condition* due to current value in a *line* or in a *controllable output* lower than the threshold value.

RELAY OUTPUT – relay, potential-free, switching outputs that control external executive devices.

SYSTEM FAULT – fault condition due to a fault in a basic component of the fire control panel (or the system). The System fault may be a *fatal error* or a *non-fatal error*. The event is indicated by common light indicators and local sound signaling.

REMOVED FIRE DETECTOR – non-system *non-fatal fault condition* due to removed fire detector in a *line*.

FUNCTION "LOGICAL AND " OF TWO LINES - function that enables the fire Control panel to indicate FIRE CONDITION FIRST STAGE when automatic detectors are activated at the same time in two lines.

3. Function

Fire control panel FS4000 is designed to operate with conventional automatic fire detectors and manual call points. The panel has outputs provided for external executive devices.

The unit is produced in four versions:

- | | |
|----------------------|------------|
| ◆ 2 fire alarm lines | - FS4000/2 |
| ◆ 4 fire alarm lines | - FS4000/4 |
| ◆ 6 fire alarm lines | - FS4000/6 |
| ◆ 8 fire alarm lines | - FS4000/8 |

4. Technical features

4.1. Fire alarm lines:

- | | |
|--|------------|
| – Maximum number of fire detectors in a line | - 32 |
| – Connecting line | - two-wire |
| – Maximum resistance of a line | - 100Ω |

4.2. Current thresholds for:

- | | |
|-----------|-------------------|
| ◆ 0÷3mA | - Fault condition |
| ◆ 3÷12mA | - Duty mode |
| ◆ 12÷80mA | - Fire condition |
| ◆ >80mA | - Short circuit |

4.3. Controllable outputs for fire condition:

- | | |
|------------------------------|---|
| -- Number | - 2 pcs |
| – Type | - potential, relay with independent control |
| – Electrical characteristics | - (19÷28)V/1A |

4.4. Relay output for fault condition:

4.4.1. Relay outputs for fire condition

Number	- 2
Type	- potential-free, switching with independent control
Electrical characteristics	- 3A/125V AC, 3A/30V DC

4.4.2. Relay output for fault condition

Number	- 1
Type	- potential-free, switching
Electrical characteristics	- 3A/125V AC, 3A/30V DC

4.5. Performance:

- Control over fire alarm lines and controllable outputs for fault conditions (short circuit and interruption) and automatic reset
- Detection of removed fire detector and automatic reset;
- Identification of manual call points;
- LED indication for alarm state and emergency;
- Delay of outputs for fire condition with time period of 1, 2, 3, 4, 5, 6 or 7 minutes after fire condition is registered;
- Option for "LOGICAL AND " realization of two fire alarm lines;
- Duty Mode condition with direct activation of Fire Condition 2nd Stage " for two fire alarm lines.
- Status Indication of the device for data transmission RS485;
- Option for switching on/off interface RS485 communication
- Built-in sounder for fire condition – one tonal, continuous, can be switched off;
- Built-in sounder for fault condition – one tonal, discontinuous, can be switched off;
- Test mode for fire alarm lines;
- Disabling fire alarm lines;
- Disabling outputs for fire condition.
- Expanding the options by means of extra relay outputs for fire condition for each line and built-in RS485 for operation in a local network.

4.6. Indications of registered events:

- Light indication - LED
- Sound - built-in sounder

4.7. Power supply

4.7.1. Mains:

- voltage - (100÷240)V
- frequency - 50/60Hz

4.7.2. Backup batteries:

- battery type - lead, gel electrolyte
- number of batteries - 2 pcs
- nominal voltage of the backup battery - 2x12VDC
- nominal capacity C_{20} - (4,5) Ah
- charge voltage - 28,0 VDC

- Operation in Duty mode upon interruption in main power supply

24V / 4,5Ah 24V / 1,2Ah

◆ 2 lines	120h	32h
◆ 4 lines	98h	24h
◆ 6 lines	80h	20h
◆ 8 lines	68h	16h

4.7.3. Consumption on backup batteries supply:

– Configuration of 2 lines	- < 35mA at 24V
– Configuration of 4 lines	- < 45mA at 24V
– Configuration of 6 lines	- < 55mA at 24V
– Configuration of 8 lines	- < 65mA at 24V

4.8. Power supply to external devices:

– voltage	- (19÷24)V
– maximum current value (including current of controllable outputs)	- 1,2A

4.9. Fuses:

– Main supply 230V	- 4.0A
– Backup battery	- 6,0A
– Power supply to external devices	-1, 85 A automatic
– Controllable outputs	- 1,1 A automatic

4.10. Dimensions - 313x218x85mm

4.11. Weight, backup batteries not included - 1,5kg

5. Contents of delivery:

– Fire control panel FS4000	- 1 pc
– End of line module “EOL”	
◆ for 2 lines	- 2 pcs
◆ for 4 lines	- 4 pcs
◆ for 6 lines	- 6 pcs
◆ for 8 lines	- 8 pcs
– Resistor 5,6kΩ/ 0,25W	- 2 pcs
– Fuse 6,0A	- 1 pc
– Fuse 4,0A	- 1 pc
– Cable bridge	- 1 pc
– Keyswitch for Access level 2	- 2 pcs
– CD with Instruction manual and Instruction for the authorized staff	- 1 pc
– Packing	- 1 pc

6. General information

6.1. Access levels

There are 4 levels of access to the variable indications and control functions of FS4000

6.1.1. Access level 1

All persons who would presumably find out and react to alarm for fault condition or fire condition have access to level 1. All light indicators are visible here.

6.1.2. Access level 2

For the personnel in charge for the fire protection; they shall be trained and authorized to operate the fire control panel in the following conditions:


- Duty Mode;
- Fire condition;
- Fault condition;
- Disabled component;
- Test.

To enter Access level 2 unlock  place the key in open condition

The following features are accessible:

- exit of fire condition (see p.8);
- suppressing the outputs activated upon fire condition;
- suppressing the local sounder;
- forced proceeding of the controllable outputs;
- connection of fire alarm lines and executive devices;

6.1.3. Access level 3

To enter Access level 2 unlock, place the key to open condition , and open the front cover of the control panel and removing the plastic little cover.

The following features are accessible:

- all options from Access level 1 and 2;
- replacing a burnt fuse;
- setting the overdue outputs
- disabling a line;
- disabling outputs for fire condition;
- Setting a line in test mode.
- Setting a line in Duty mode with direct Fire condition 2nd stage activation;
- Switching on / off communication interface RS485;
- Choosing user configuration for the outputs;
- Module FD4201 assamblage




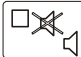
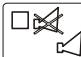


6.1.4. Access level 4

Accessible for personnel trained and authorized by the Producer to repair the fire control panel and to modify the software. Special means are required for access to this level.

6.2. Indications and buttons for control

Error! Reference source not found. gives detailed description of the indications for each status, **Error! Reference source not found.** presents the basic means for control. In Appendix 1 is displayed the front panel of the control panel with indications and buttons for control.

Table 1

Conditions of the fire control panel	Indication
All conditions - The fire control panel is power supplied	 Indicator <i>Power supply</i> – continuous green light
All conditions	 Indicator <i>Delay of outputs</i> - continuous yellow light
Fire condition	 Common indicator <i>Fire condition</i> – flashing light or flashing red light
Fire condition and Fault condition - Sound signaling is suppressed	 Indicator <i>Stop/Start Press Alarm</i> - continuous red light
Fire condition- Outputs for fire condition are disabled	 Indicator <i>Disabled outputs</i> - continuous red light
Fault condition - all types of faults	 Common indicator <i>Fault condition</i> - flashing yellow light
Fault condition – System fault	 Indicator <i>System fault</i> – continuous yellow light


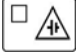




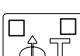
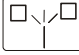
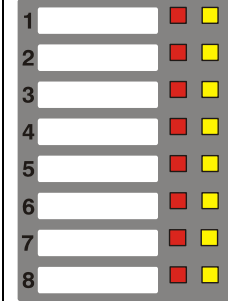

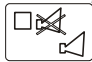
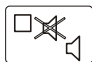

Conditions of the fire control panel	Indication
Fault condition - Fault in mains supply	 Indicator <i>Fault in mains supply</i> - continuous yellow light
Fault condition - Fault in the backup batteries or in the charger	 Indicator <i>Backup battery fault</i> - continuous yellow light
Fault condition- Fault in internal power supply units, voltage for supply of lines and/or user voltage 24V	 Indicator <i>Fault in internal power supply unit</i> - continuous yellow light
Fault condition - Fault in a controllable output	 Indicator <i>Out of order/Disabled controllable output</i> – flashing yellow light
Fault condition – Grounds Leakage to earthen wire or earthen case	 Indicator <i>Fault in grounds</i> – continuous yellow light
Disabled component - Disabled line or controllable output	 Indicator <i>Disabled component</i> - continuous yellow light
Disabled component and Test condition	 Indicator <i>Disabled component</i> and Indicator <i>Test</i> - continuous yellow light Indicator <i>Test</i> – continuous yellow light
Condition of the device for RS485 interface communication	 Indicator for the Condition of the device for RS485 communication - red LED for a signal confirmation from Remote Control Panel FS5200R; - yellow LED Indicates Fault Condition in the network or in the transmitting device.
Fire condition / Fault condition	 Individual indicators for Fire condition and Fault Condition in line “N”- – red light and continuous signal from the local sounder in Fire condition; – yellow flashing light and interrupted signal from the local sounder in Fault condition;


Table 2

Means of control	Condition of the fire control panel	Access level	Operation
Button <i>Reset</i> 	Fire condition	Level 2	Exit of Fire condition
Button <i>Outputs</i> 	Fire condition	Level 2	- if outputs for fire condition are activated – to suppress the outputs; - if outputs for fire condition are not activated – to force activation
Button <i>Alarm</i> 	Fire condition and Fault condition	All Levels	To suppress /activate the local sounder
Button <i>Test Indication</i> 	Duty mode	All Levels	LED indication and Testing of the sound signal

6.3. Configuration duty modes of lines, outputs and operation of the interface RS485 – General description

In the Fire Control Panel through eight positional Fire Alarm Systems there are options for:

- defining duty mode of the lines (pos.4, fig.1);
- defining time delay (pos.3, fig. 1);
- disabling controllable outputs (pos.3, fig. 1);
- switching on/off communication interface RS485 (pos.3, fig .1);
- configuring of outputs with 8 steady set user combinations (pos.3, fig .1).

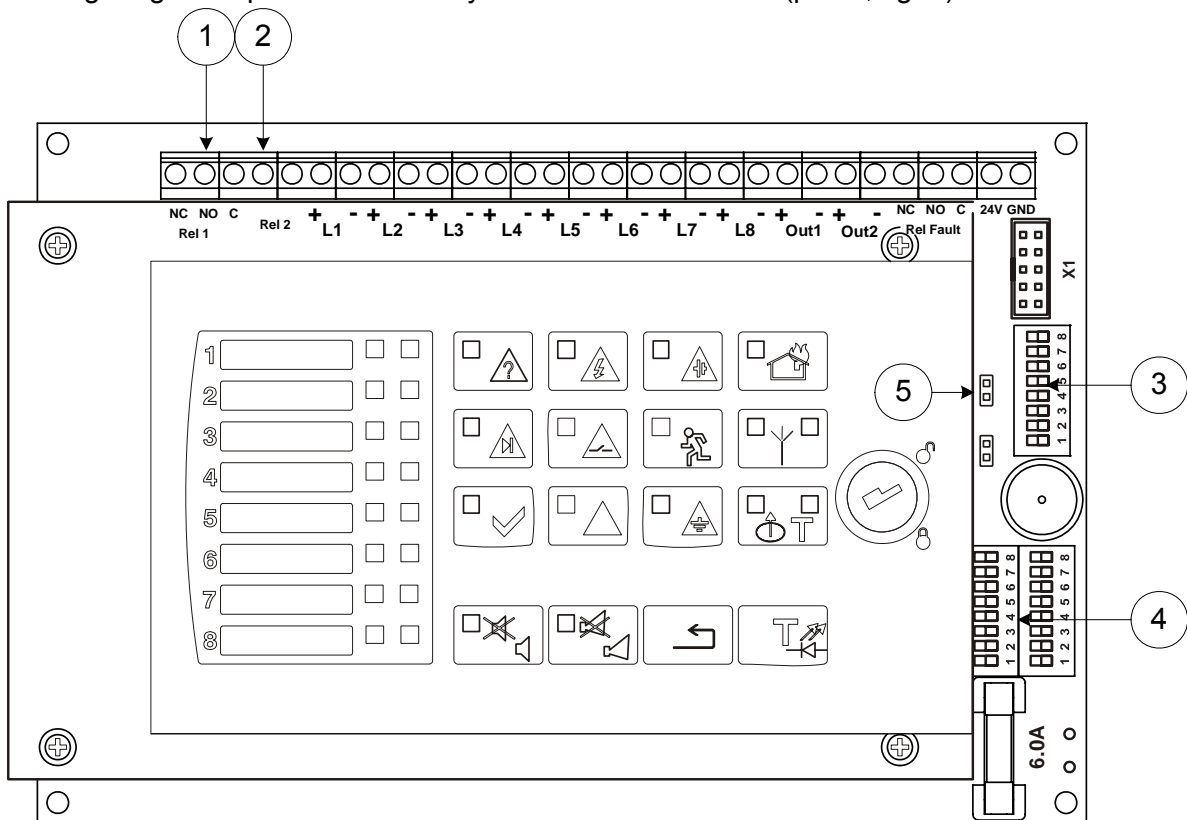

6.4. Conditions of the fire control panel

Fire control panel FS4000 monitors the fire alarm lines by consecutively scanning their condition. Depending on the current value, the line can be in normal condition, in fire condition or in a fault condition (short circuit or break). Simultaneously, a constant control for removed fire detectors is being carried out, provided that the fire alarm installation is designed and completed as shown on the diagram of section 13.3. Control over the controllable outputs of fault condition (short circuit or break) is being carried out as well.


The fire control panel FS4000 operates in five basic modes: Duty Mode, Fire Condition, Fault Condition, Disabled Component Mode and Test Mode.

7. Duty mode

7.1. Description

The fire control panel is in Duty Mode, when it is not in Fire condition or in Fault condition.

7.2. LED and sound indication

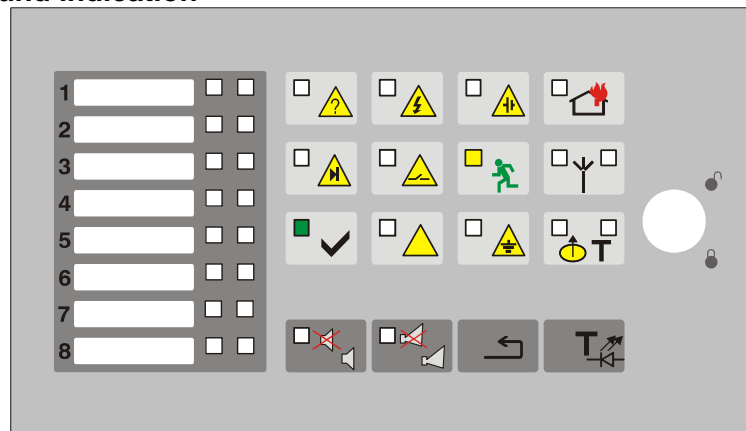

In Duty mode are active only the green LED indicator (Power supply) and the yellow indicator if a short circuit is set for the outputs. The local sounder is off.

7.3. Using the buttons

Active buttons in Duty mode:

- pressing the button tests the LED indication and sound signaling;

- using the button in this mode activates the controllable outputs (or suppresses them if they were activated). The aim is to signal for forced evacuation if necessary.


7.4. Additional option

In FS4000 there is opportunity for configuring line(s) in a definite way so that if signal for Fire condition, the Fire Control Panel enters directly in Fire condition 2nd stage. Configuring is described in Table 10.2 and it is in accordance with Table 3. Setting a line in this mode is performed by manual operation of placing a pair of switchers in appropriate line positions (ON ON).


8. Fire condition

8.1. Description


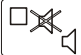

The Fire Control Panel enters Fire condition upon double activation of a fire detector in any fire alarm line, for a period not longer than 60 seconds. After the first activation the control panel resets the fire alarm line for 3 seconds, and expects second activation in the next 60 sec. If activation occurs in this period, the Fire Control Panel enters Fire Condition. The Fire Control Panel can enter Fire condition in one fire alarm line or in a number of fire alarm lines.

To exit Fire condition, press button  at Access level 2.


8.2. LED and sound indication

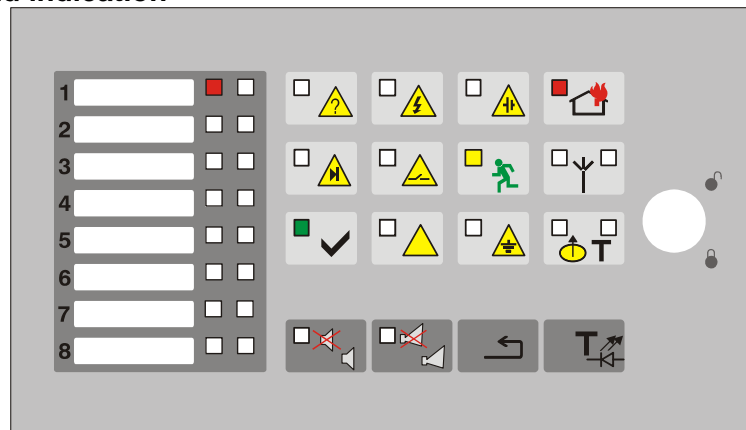

In this condition are illuminated :

- common indicator  with red interrupted light if Fire condition 1st stage and red continuous light if Fire condition is 2nd stage;
- local indicators from all lines of which the Fire Control Panel has indicated Fire condition;
- If the local sounder is suppressed by button , the indicator built-in the button is illuminated with red light ;
- if the outputs are suppressed by button , then the button indicator is illuminated with red light;

Local sounder is activated.


If the Control Panel is connected with local network by Remote Control Panel for indication , the indicator is illuminated in red light when receiving a confirmed signal for Fire condition from the Remote Panel FS5200E.

8.3. Using the buttons

8.3.1. Button (Alarm)

Press the button to:

- Switch off the local sounder if it is activated due to Fire condition or Fault condition;
- Activate the local sounder if the fire control panel is in Fire condition or Fault condition and the local sounder is previously deactivated by the same button.

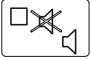The LED indicator  is illuminated if the local sounder is switched off for Fire condition or Fault condition.

The button does not affect and is not cancelled by the following events:

- Fire condition in new line ;
- New Fault condition will activate the local sounder.


Access to the button is allowed at Access level 1, 2, 3.

8.3.2. Button (Outputs)

The button operation depends on the current access level and on the status of the fire control panel.

Where lines in Fire condition are available, press the button to:

- In case of suppressed outputs for fire condition – to force activation of the outputs;
- In case of activated outputs for fire condition – to suppress the outputs.

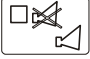The LED indicator  illuminates if outputs for fire condition are suppressed.

8.3.3. Button (Reset)

Press it to force the control panel to exit Fire condition and to reset the lines (cuts off the power supply for 3 seconds).

Access to the button is allowed at Access level 2.

9. Fault condition

9.1. Description

The fire control panel enters Fault Condition when any of the events below has been registered:

- System fault;
- Battery Low – backup batteries discharged due to interruption in mains supply;
- Fault in a line – removed fire detector, short circuit or break;
- Fault in a controllable output – short circuit or break;
- Fault in main supply;
- Fault in backup batteries power supply;
- Short circuit or leakage to ground wire;
- Fault in power supply to lines;
- Fault in power supply to external devices;
- Network fault or fault in the transmitting device;




In System fault the main processor is not able to continue operation.

You can exit the fault condition only if you disconnect the control panel from the mains supply and send it for repairs.


All other faults are not fatal and switch off some of the periphery devices only. The fire control panel exits the status automatically 8 s after the fault condition is eliminated.






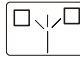
In Fault condition terminals C and NC of relay output REL Fault are connected; when no fault condition is registered, terminals C and NO of the same output are connected.



9.2. LED and sound indication

In *Low Battery* no LED indicator the indicator  (Fault Condition) flashes in steady yellow light, and indicators  (Fault in backup battery) and  (Fault in mains supply) flash in yellow light.

The local sounder is activated and releases interrupted signal.

In all other fault conditions the indicator  (Fault condition) flashes in yellow. Depending on the type of the fault condition the following indicators are illuminated:

- System fault - indicator  (System fault) is illuminated in yellow light;
- Fault in fire alarm line – separate indicator for fault condition flashes in yellow to indicate:
 - ◆ Short circuit - 1Hz frequency /slow flashing light/;
 - ◆ Break in a line - 4Hz frequency /quick flashing light/;
 - ◆ Removed fire detector - 4Hz frequency, 1 second pause /interrupted, quick flashing light/.
- Fault condition in controllable output - indicator  (Out of order / Disabled controllable output) flashes in yellow light;
- Fault in backup batteries - indicator  (Backup battery fault) is illuminated in yellow light;
- Fault in power supply to external devices - indicator  (Fault in internal power supply) is illuminated in yellow light;
- Short circuit or leakage to ground wire - indicator  (Fault in grounds) is illuminated in yellow light.
- Fault in the local network or in the transmitting device  the right indicator is illuminated in continuous yellow light.

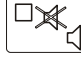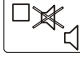
The local sounder is activated and produces discontinuous signal. If the sound indication has been suppressed by button  (Alarm), the LED indicator  is illuminated in continuous red light.

9.3. Using the buttons

No buttons are active in System fault.

In all other fault conditions button  (Alarm) is active only. Press the button to:

- Switch off the local sounder if it responded for Fire condition or Fault condition;
- Activate the local sounder if the Fire control panel is in Fire condition or Fault condition and the local sounder is previously suppressed by the same button.

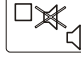The LED indicator  is illuminated, if the local sounder is switched off for Fire condition or Fault condition.

The button does not affect nor is its action cancelled by the following events:

- When new line enters Fire condition, the local sounder will be activated;
- When new fault condition is registered, the local sounder will be activated.

Access to the button is allowed at Access level 1, 2, 3.

10. Disabled component mode

10.1. Description

The fire control panel enters Disabled component mode after a component has been manually disabled – a fire alarm line or a controllable output. The condition is set through microswitchers for each line separately, and also for outputs for fire condition – controllable and relay outputs.

The disabled line is switched off (the power supply is cut off) and is not monitored for activated fire detector and faults. The disabled outputs are switched off (the executive device can not operate) and the controllable output is not monitored for faults.

10.2. Disable/Enable a line:

Duty mode of lines is determined by a pair of switchers (pos.4, fig.1). Each line has a pair of switchers, whose position is determined by the operation mode (fig . 2)

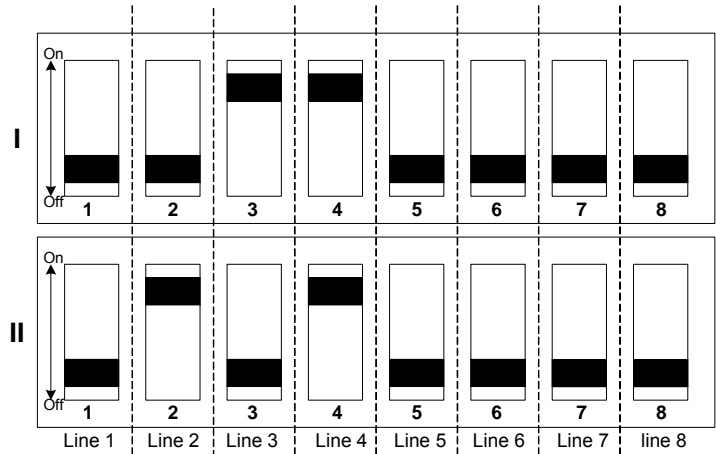


Fig.2

For each individual line the following modes are possible (N- line number)

Table 3


Type of Mode	DIP N (I)	DIP N (II)
Duty mode	OFF	OFF
Test	OFF	ON
Disabled line	ON	OFF
Duty mode with direct indication of Fire condition 1 st stage	ON	ON


10.2.1 To disable a line

Move the pair of switchers of the line in position ON OFF according to table 3.

With continuous yellow light are illuminated :

- the local indicator of the line;

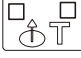- the left indicator  (if no other disabled components)

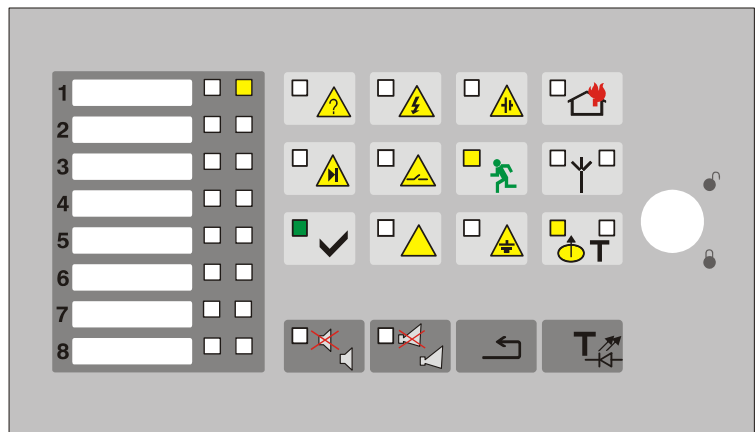


10.2.2. To cancel disabling a line

Move the pair of switchers of the disabled line in position OFF OFF in accordance with table 3.

Lights of the following indicators are switched off:

- local indicator of the line ;

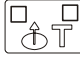- left indicator  (if no other disabled components).

10.3. To Disable/Enable outputs in Fire condition

For time delay setting (table 5), for disabling controllable outputs , interface RS485 ,(table 4) and for free - programmable outputs (table 6) is used 8 discharge microswitchers (pos.3, fig .1)

Table 4


DIP	ON	OFF
1	Time delay See Table 5	
2		
3		
4	Disabled controllable outputs	Enabled controllable outputs
5	Communication interface RS485 is ON	Communication interface RS485 is OFF
6	User combinations See Table 6	
7		
8		


10.3.1. To disable controllable outputs

Move DIP 4 into position ON (Table 4).

With continuous yellow light are illuminated:

- indicator  illuminated in continuous yellow light;

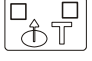- left indicator  (if no other disabled components).

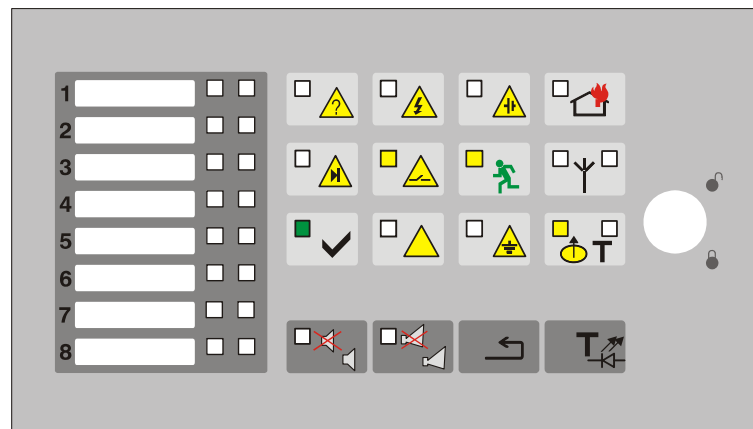


10.3.2. To cancel the disabling of the controllable outputs

Move DIP 4 into position OFF (Table 4).

Lights of the following indicators are switched off :

- indicator  ;

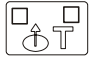- left indicator  (if no other disabled components).

10.4. Switching ON/OFF communication interface RS485

The extension of FS4000 with module FD4201 allows the Fire Control Panel to participate in the local network composition and to communicate with other Fire control and Remote control panels

Fifth discharge (pos 3, fig .1) microswitchers for On and Off communication interface RS485 as follows:

Position ON – communication interface is switched ON;

Position OFF – communication interface is switched OFF;

For Disabled component mode no sound indication is supported.

10.5.Enable/Disable performance “ground check”:

10.5.1. When the Fire Control panel operates altogether with spark protection unit , the “ ground check “ function is disabled

- place the jumper (pos.5, fig.1) into position “DISABLE”;

10.5.2. Enable “ground check” function:


- take off the jumper (pos.5, fig.1).


11. Test condition

11.1. Description

The Fire control panel enters Test Mode after a fire alarm line has been manually set to operate in test condition. Test Mode condition is set by a pair of microswitchers (pos.4, fig.1). Each line has a pair of switchers, whose position is determined by the operation mode (фиг.2) of each separate line.

The Fire Control Panel provides option for testing LED and sound signaling indication.

Pressing and holding the button  illuminates all lights and LEDs and activates the buzzer.

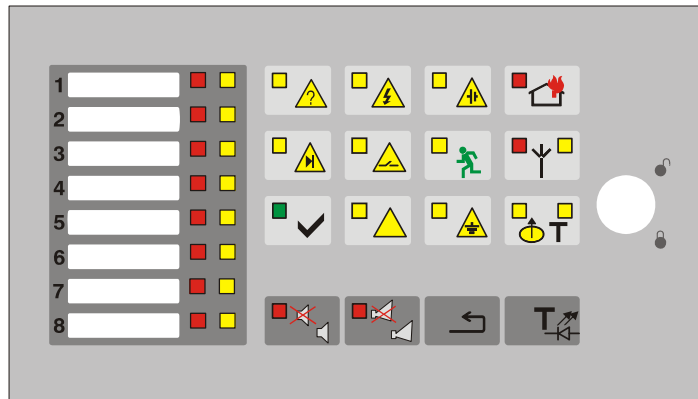

11.2. Line in Test condition


When a fire alarm line is in test condition, the following operational changes are in effect:


- upon registration of Fire condition in this line the sound indications, light indications, associated outputs do not operate;
- upon registration of Fault in a line the sound indicators, light indicators and the relay output for fault condition do not operate;
- the line is being automatically reset (the power supply is interrupted for 3 s) every 64s.

11.2.1. Setting a line in Test condition

Move the pair of switchers into position (OFF ON) according to Table 3.

In this condition are illuminated:

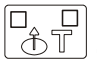- the local indicators of the line with flashing red and yellow light ;
- the right indicator with continuous yellow light  (if there were no lines in test condition).

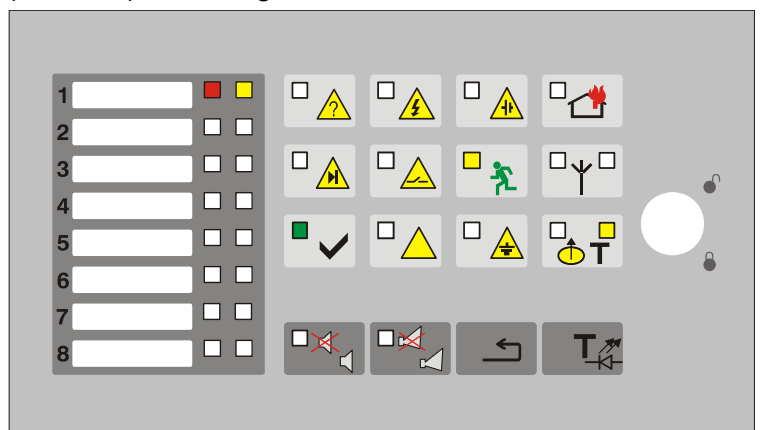


11.2.2. To cancel Test Condition of a line

Move the pair of switchers into position (OFF OFF) according to Table 3.

The following lights are switched off:

- local line indicators;

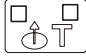- right indicator  (if no other lines are set to test condition).

12. Delay of outputs

12.1. Description

The Fire control Panel registers the time delay of the outputs after manual operation for setting the appropriate value. The time delay is set by a combination of 1st, 2nd and 3rd discharge of DIP switch (pos.3, Figure 1) (Table 4) and can be 0, 1, 2, 3, 4, 5, 6 or 7 minutes. At time delay set to "0" – the outputs are activated immediately after the Fire control panel enters Fire condition.

Time delay setting is performed by moving the first three discharges of microswitchers (pos 3, fig .1) in the following tables :

Table 5

DIP	0 minutes	1 minute	2 minutes	3 minutes	4 minutes	5 minutes	6 minutes	7 minutes
1	OFF	OFF	OFF	OFF	ON	ON	ON	ON
2	OFF	OFF	ON	ON	OFF	OFF	ON	ON
3	OFF	ON	OFF	ON	OFF	ON	OFF	ON



When the time delay is set to $\neq 0$, the indicator is illuminated with continuous yellow light

13. User configuration of the outputs

The Fire Control Panel provides the option for inserting combinations for outputs activation. 8 constant combinations are set. An operating combination shall be chosen by 6th, 7th, and 8th discharge DIP switch (pos.3, fig.1).

Possible combinations are given in Table 6.

Table 6

			Rel 1	Rel 2	Out 1	Out 2
1	DIP	position	Switches On immediately	Switches On with time delay	Switches On with time delay	Switches On with time delay
	6	OFF				
	7	OFF				
	8	OFF				
2	DIP	position	Switches On immediately	Switches On immediately	Switches On with time delay	Switches On with time delay
	6	OFF				
	7	OFF				
	8	ON				
3	DIP	position	Switches On with time delay	Switches On with time delay	Switches On with time delay	Switches On with time delay
	6	OFF				
	7	ON				
	8	OFF				
4	DIP	position	Switches On with time delay	Switches On with time delay	Switches On immediately	Switches On immediately
	6	OFF				
	7	ON				
	8	ON				
5	DIP	position	Switches On only in Fire condition of line 1	Switches On only in Fire condition of line 2	Switches On with time delay	Switches On with time delay
	6	ON				
	7	OFF				
	8	OFF				

6	DIP	position	Switches On only in Fire condition of lines 1 or 2	Switches On only in Fire condition of lines 3 or 4	Switches On with time delay	Switches On with time delay
	6	ON				
	7	OFF				
	8	ON				
7	DIP	position	Switches On only in Fire condition of lines 1 and 2	Switches On only in Fire condition of lines 3 and 4	Switches On with time delay	Switches On with time delay
	6	ON				
	7	ON				
	8	OFF				
8	DIP	position	Switches On only in Fire condition of line 1,2,3 or 4	Switches On only in Fire condition of line 5,6,7 or 8	Switches On with time delay	Switches On with time delay
	6	ON				
	7	ON				
	8	ON				

14. Installation and initial start of the fire control panel

14.1. To mount the fire control panel :

- unpack the unit;
- open the unit after unlocking it with the key;
- put the dowels on the determined places;
- fasten the control panel to the dowels through the three holes provided on the chassis.

It is recommended to avoid installation of the control panel near sources of heat (radiators, conditioning systems etc.).


Feed the connecting cables for fire detectors, periphery devices and main supply to the control panel using the provided holes in the casing.

14.2. Periphery devices assembly

All connections are to be made by means of terminals, mounted on the printed circuit boards . Be advised, that the total consumption of the voltage powering the external devices (terminal "+ 24V") shall not exceed 1,2 A in heavy duty mode.

14.2.1. Mounting periphery devices to controllable outputs

Terminals "+Outx", "-Outx" - controllable potential output, activated in Fire condition shall be used. The fire control panel constantly monitors the power supply line for Fault conditions (break or short circuit).

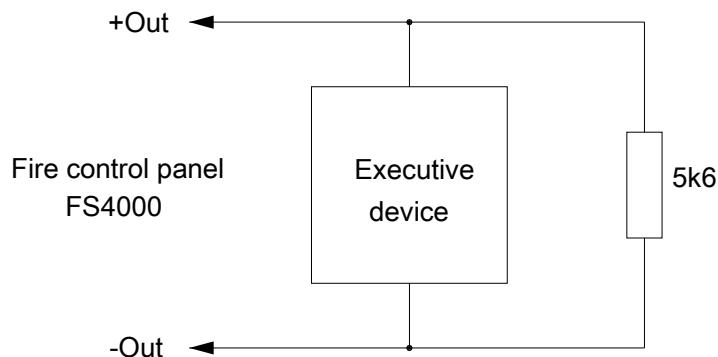

If the controllable output is not in use, fix a resistor 5k6/0,25W immediately to terminals "+Outx", "-Outx".

14.2.2. Mounting periphery devices to relay outputs

Use:

- terminal "+24V" – positive lead of the stabilized direct current supplying the external devices (light and sound signaling devices, executing devices and others);
- terminal "GND" – chassis ground (negative lead of the stabilized direct current supplying the external devices);
- terminals "REL Fault/C", "REL Fault/NO" и "REL Fault/NC" - potential free relay contacts. Terminals "REL Fault/C" and "REL Fault/NO" are connected where no fault condition is registered; terminals "REL Fault/C" and "REL Fault/NC" where fault condition is registered.
- terminals "REL1/C", "REL1/NO" and "REL1/NC" - potential free relay contacts of REL1. In duty mode there is a connection between terminals "REL1/C" and "REL1/NC", and in Fire condition between terminals "REL1/C" и "REL1/NO".
- terminals "REL2/C" and "REL2/NO" - potential free relay contacts of relay REL2. In duty mode there is no connection between terminals "REL2/C" and "REL2/NO", in Fire condition there is a connection between terminals "REL2/C" and "REL2/NO".

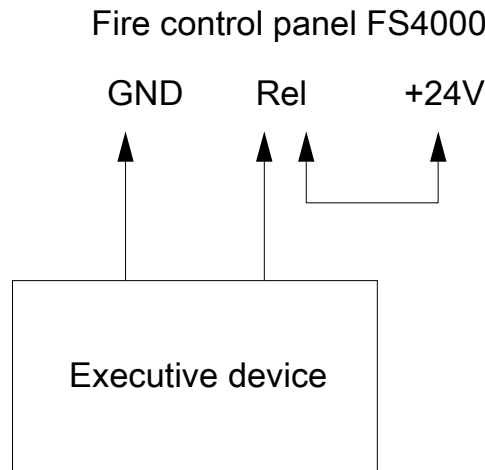


Fig.3

Unused relay outputs remain free (the terminals are not occupied).

14.2.3. Connection of extension module FD 4201

In Fire Alarm Control Panel FS 4000 there is a option for extension through module FD 4201. The module FD4201:

- expand the panel's outputs with additional 2, 4, 6 or 8 (depend from number of the lines in the panel) relay non-potential outputs, activated trough fire;
- add interface RS485 for connection of the panel to local network. The connection between the panel and the module is by connector on the panel.


14.3. Connecting fire detectors

Fire detectors are connected to the fire control panel by means of two-wire insulated line of total resistance up to 100Ω. Recommended cross section of the wires depending on the length of the line is:

- | | |
|----------------|--------------------------------|
| ♦ Up to 500 m | -cable 2 x 0.5 mm ² |
| ♦ Up to 1000 m | -cable 2 x 1.0 mm ² |
| ♦ Up to 1500 m | -cable 2 x 1.5 mm ² |

Before connecting a fire alarm line to the control panel, run a check with measuring equipment. Where the installation is completed correctly (EOL module is mounted) between the + and the – of the cable, entering the control panel, a resistance of 5.6 kOhm (+/-10%) shall be measured. Also, check both cables to "GROUND" and the measuring equipment shall display that no leakage or connection is registered.

Complete the connection using the terminals of the corresponding modules “+L x” and “-L x” (where “x” is the number of the line); follow the designated polarity.

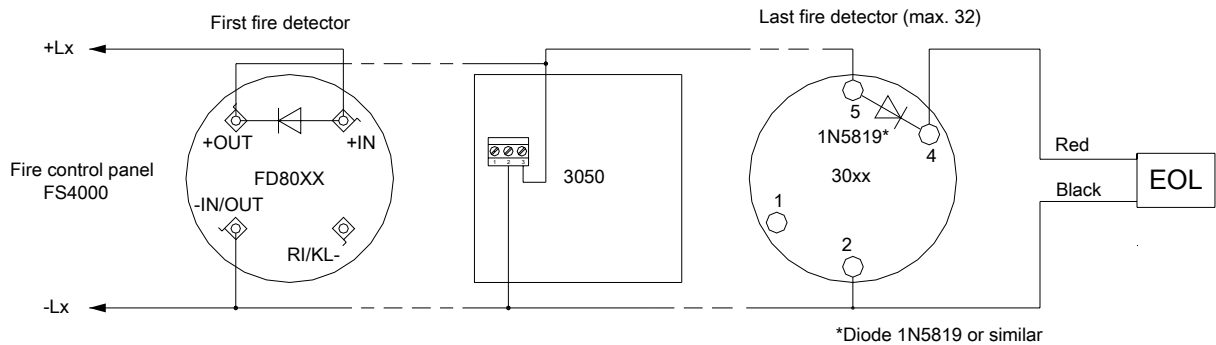

Automatic fire detectors of series FD3000 and FD8000 or compatible can be used. To enable detection of Fault condition *Removed fire detector* diodes shall be mounted – for example 1N5819, at the indicated direction. The manual call points shall respond with current $\geq 40\text{mA}$ at voltage 24V. You can use FD3050 Manual Call Point or compatible.

Up to 32 fire detectors can be integrated in one fire alarm line regardless of their type.

End of line modules EOL shall be connected directly to the terminals of unused fire alarm lines, otherwise the lines will trigger Fault condition.

14.4. Connection to power supply

Connect a feeding cable to the terminal with mains fuse, observing the following positions :

- P – power wire “Phase”;
- N – power wire “Null”;
- GROUND - safety ground wire.

The cable shall be double insulated and of $0,5\text{mm}^2$ section for the power supply wires, and of $1,5\text{mm}^2$ section for the safety ground wire.

The other end of the feeding cable is connected to the mains power supply by means of junction box.

The mains power supply of the fire control panel shall be in a separate loop.

15. Fire control panel start up

- Make sure that the connection to mains power supply is properly completed.
- Make sure that the periphery devices are correctly connected.
- Place the fuse in the terminal and all LEDs shall illuminate for a short time, then the control panel starts operation.
- Connect the feeding cable and the backup batteries; the batteries shall be in a series connection.
- Connect the red wire to the positive backup battery pole, and the blue wire - to the negative pole. The overall voltage of both batteries shall not exceed 17.6V, otherwise the fire extinguishing control panel will not recognize them.
- Configuring if necessary:
 - Time delay
 - Switching On/Off communication interface
 - User combinations for activating outputs
- If necessary attach a card with inscribed text for each line.

16. Conditions of operation, storage and transportation

16.1. Operation and storage

The fire control panel shall operate and be kept in closed premises, under the following conditions:

16.1.1. Temperature:

- storage - 5°C to 35°C
- transportation - minus 10°C to 50°C
- operation - minus 5°C to 40°C

16.1.2. Relative humidity:

- storage - up to 80%
- operation - up to 93%

16.2. Transportation

The fire control panel shall be transported by vehicles, in factory packing, in the above stated environmental conditions and at sinusoidal vibrations with acceleration amplitude not more than 4,9m/s² in frequency range 10 to 150Hz.


17. Warranty

The producer guarantees compliance of the unit with EN 54-2: 1997/ A1:2006/AC: 2009, EN 54-4:1997/A2: 2006/AC 2009. The warrant period is 18 months from the date of the purchase, providing that

- the conditions of storage and transportation have been observed;
- the startup has been done by authorized personnel only;
- the requirements for operation stated herein have been observed.

Appendix

Appendix 1

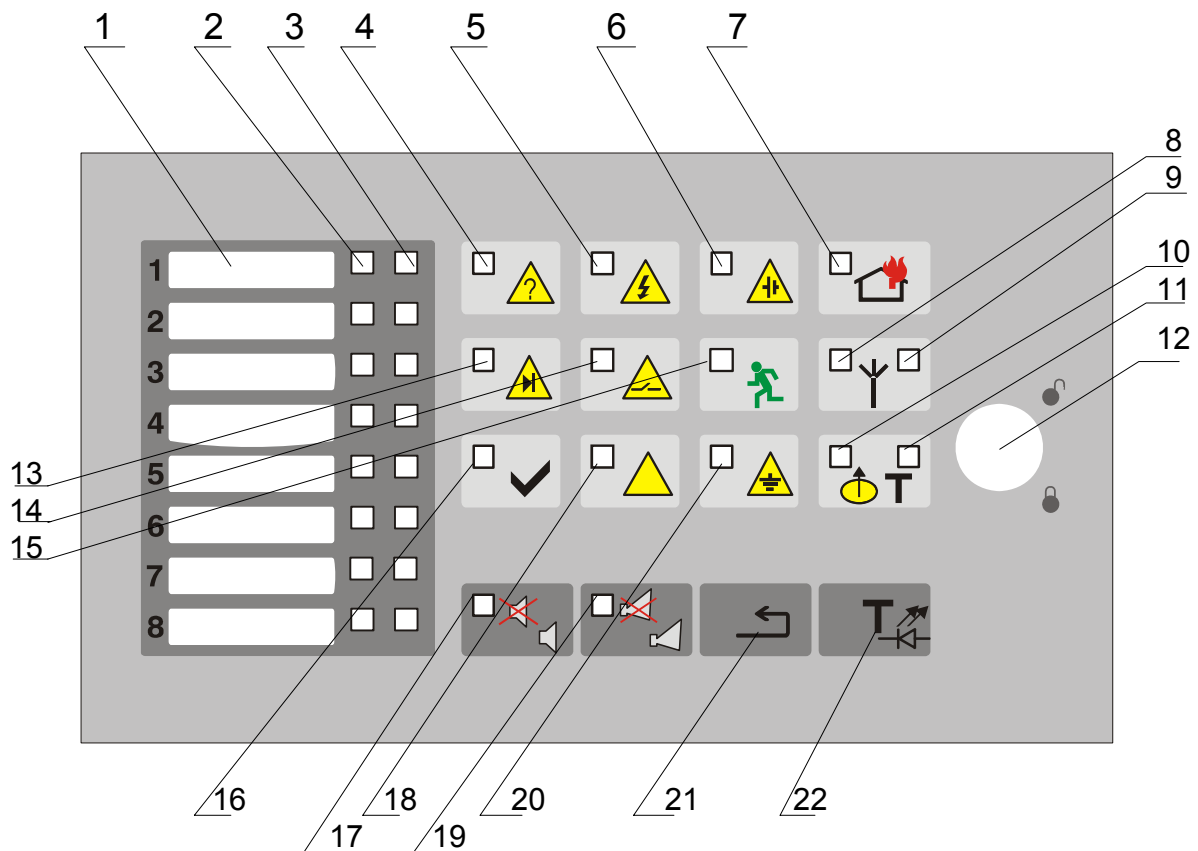

- 1 Space for line labeling
- 2 Separate indicators for fire condition
- 3 Separate indicators for fault condition
- 4 Common indicator for fault condition
- 5 Indicator *Fault in mains power supply*
- 6 Indicator *Fault in back up battery power supply*
- 7 Common indicator Fire condition
- 8 Indicator *Confirmed fire condition from the Remote Control Panel*
- 9 Indicator *Fault in Communication interface RS485*
- 10 Indicator *Disabled component*
- 11 Indicator *Test condition*
- 12 Keyswitch
- 13 Indicator *Fault in internal supply units*
- 14 Indicator *Out of order/Disabled controllable output*
- 15 Indicator *Delay of outputs*
- 16 Indicator *Power Supply*
- 17 Button - Indicator *Start /Stop Alarm*
- 18 Indicator *System fault*
- 19 Button – Indicator *Stop/Start Alarm*
- 20 Indicator *Fault in grounds*
- 21 Button *Reset line*
- 22 Button *Test*

Front panel of FS4000

Appendix 2

